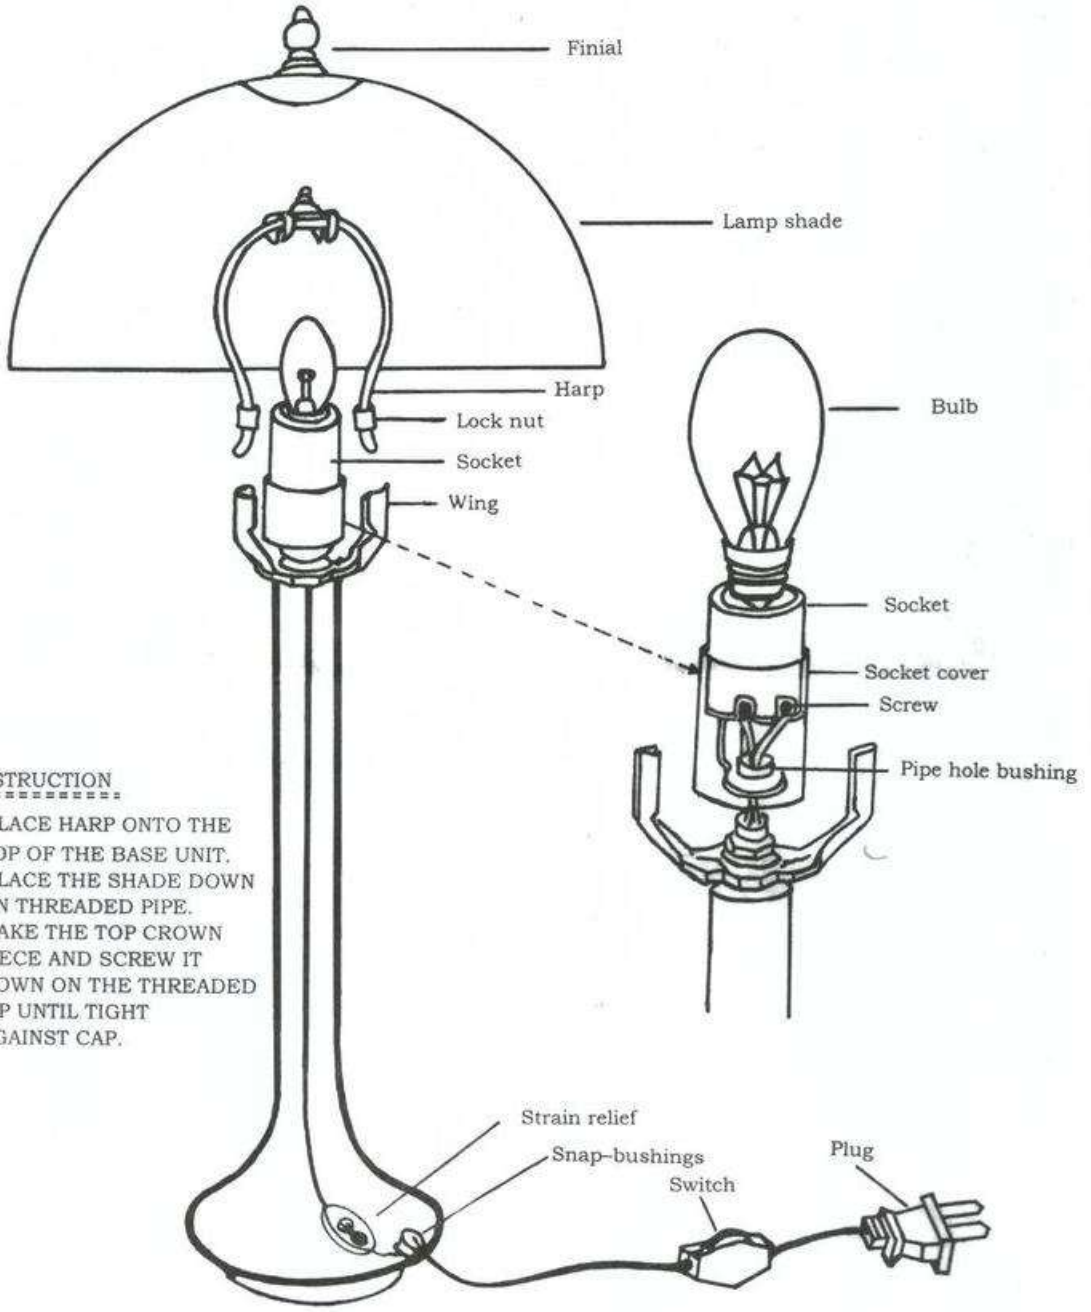
Finial
Lamp shade
Harp
Lock nut
Socket
Wing
Bulb
Socket
Socket cover
Screw
Pipe hole bushing
INSTRUCTION
1. PLACE HARP ONTO THE TOP OF THE BASE UNIT.
2. PLACE THE SHADE DOWN ON THREADED PIPE.
3. TAKE THE TOP CROWN PIECE AND SCREW IT DOWN ON THE THREADED PIP UNTIL TIGHT AGAINST CAP.
Strain relief
Snap-bushings
Switch
Plug